

## ***PRODIGY ADVANCE<sup>2</sup>***

New Prodigy Advance" items have retained all the features of the standard Prodigy Advance system with the addition of **F28** (28 loco functions) compatible. To operate the loco functions you must use the keys marked 0 – 9 as stated in the manual, functions 11 – 28 will require the SHIFT key to be pressed before the desired function number in full. As on all units the LCD screen will only display up to F12.

Both Prodigy systems are fully compatible with each other but only when both walkabout and base unit have the *PRODIGY ADVANCE* "logo will the full 28 functions be accessible. In the event of either item not carrying this logo the system will default to the standard 20 functions. Up to twenty-five loco addresses can be held in the walkabout memory but if only two are entered it will default to one, if this happens a third loco address should be entered.

This notice supersedes all other instructions in regards to this system