


## PRODIGY ADVANCE<sup>2</sup> - DCC12 Walkaround Controller

- WALKAROUND CONTROLLER
- PLUGS STRAIGHT INTO YOUR BASE UNIT OR EXTENSION PLATE
- EASY TO USE
- SENDS ALL YOUR DCC COMMANDS TO THE BASE UNIT
- UP TO 99 WALKAROUNDS CAN BE USED ON A LAYOUT

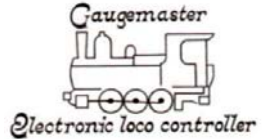

You will find brief instructions on how to use your WALKAROUND on the back of the controller itself. For full instructions, please consult your PRODIGY ADVANCE user manual.

### WARRANTY AND REPAIR

If you have mislaid your PRODIGY ADVANCE user manual or you would like an extra copy, please send us a SAE at the address shown below. This document can also be downloaded from [www.gaugemaster.com](http://www.gaugemaster.com) where you will also find other useful information.

If you believe your Extension Plate is faulty, please telephone us in the first instance. We will advise you of your best course of action. If it involves sending anything back, please send it to the address below via insured post and packed securely.

#### POSTAL ADDRESS

Technical Department  
**GAUGEMASTER** Controls Plc  
Gaugemaster House  
Ford Road, Arundel  
West Sussex  
BN18 0BN

#### OTHER USEFUL CONTACT NUMBERS

Telephone - 01903 884321  
Shop Sales - 01903 884488  
Fax - 01903 884377  
E Mail - [technical@gaugemaster.co.uk](mailto:technical@gaugemaster.co.uk)